

ACTIVESHOP[®]

INSTRUCTION MANUAL


Cosmetic helper 084



Importer:


ACTIVESHOP Sp. z o.o.
Ul. Graniczna 8b, building
DC2A 54-610 Wrocław,
Poland
www.activeshop.com.pl
Rev. A/04/2024

Device dimensions:

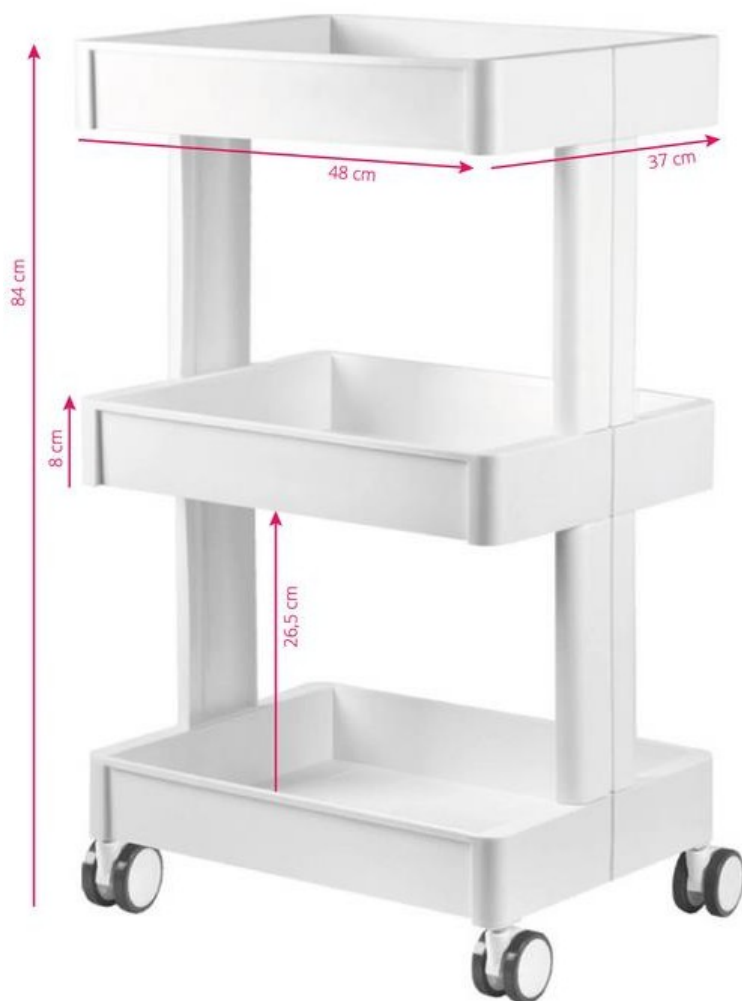

The set includes:

- 4 casters
- 3 shelves
- 4 side walls of the table

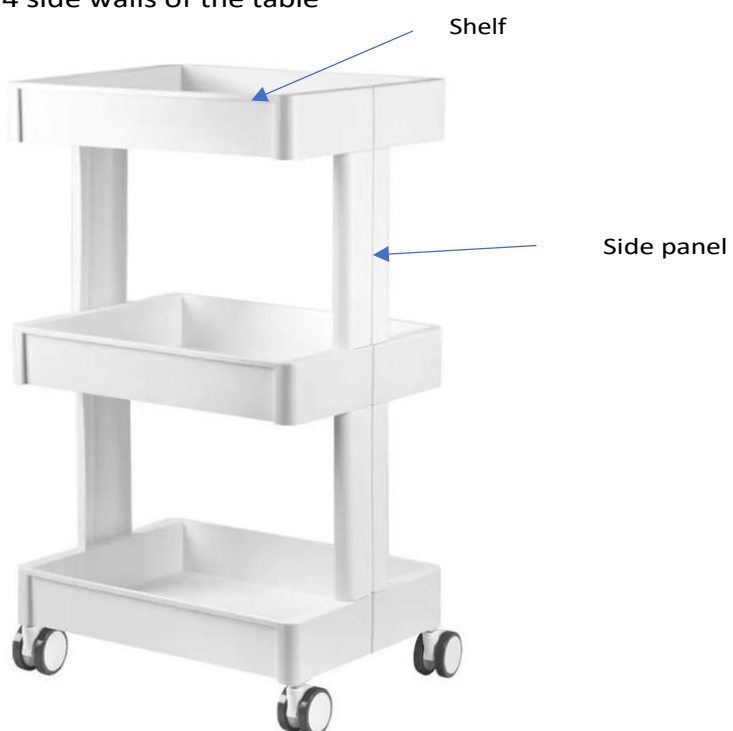

Instructions for assembling the device

The table consists of 3 shelves, which need to be connected to each other using the side walls. The lower shelf has holes on the underside for mounting wheels. The side wall is inserted into the tabs located in the shelf. The wall should be set upright and pressed into the tabs of the shelf. As in the picture below.



Then put another shelf on top of this, pressing firmly so that the shelf holds firmly. As in the picture below.

The shelf on both sides has tabs into which the side panels must be inserted to mount it and assemble the unit.



Instructions for assembling the casters

Attach the casters to the lower shelf. The lower shelf has holes on the underside for mounting the casters (one in each corner). The pin should be pressed into the hole, thereby attaching the caster. As in the picture below.



SAFETY MEASURES

1. Do not bend the components of the device.
2. Do not expose to prolonged contact with sunlight, water or moisture.
3. Do not overload the device with too much load.
4. Protect against contact with fire and flammable agents.
5. Do not place the device on an unstable surface.
6. Do not throw the device.
7. The device is not intended for play by children. Do not allow children to play with the device.
8. Do not leave the appliance unattended when children or persons without sufficient knowledge in the use of the appliance are near it.

DISPOSAL OF THE APPLIANCE



Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Electrical appliances should not be disposed of in household waste containers. Follow the rules for disposal of this type of equipment. In order to protect the

The environment in accordance with Directive 2012/19/EC on waste electrical and electronic equipment, waste electrical equipment should be collected separately, and then handed over to collection points for waste electronic and electrical equipment. At the end of their useful life, as well as old appliances contain full-value recyclable components, so they should be handed over for reprocessing. Therefore, they should be handed over to appropriate collection points, as well as they can also be handed over to ACTIVESHOP Ltd.

STORAGE AND TRANSPORT

The device should be transported at temperatures between (-) 20 °C and (+) 50 °C only in its original packaging. Store the device in a well-ventilated area with a relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40

°C. During storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.