

ACTIVESHOP[®]

USER MANUAL

FX-25 Dust Collector



Importer:

ACTIVESHOP SP. Z O.O.
ul. Graniczna 8b, bud. DC
2A 54-610 Wrocław, Poland
www.activeshop.com.pl



APPLICATION:

The device is intended for use in beauty salons and manicure studios. It absorbs dust filed from nails through a fan into a replaceable bag (filter) located under the fans.

OPERATING INSTRUCTIONS:

1. The device is intended for use indoors in dry and closed rooms.
2. Do not attempt to repair the device yourself. In the event of a malfunction, please send the device to a service center to avoid the risk of electric shock.
3. If there are manufacturing defects, follow the warranty card instructions.
4. Keep the device away from strong sources of heat or cold, and do not expose it to direct sunlight or moisture.
3. Keep away from places where the device may be exposed to mechanical damage or similar.
4. Do not allow direct contact with water or other liquids.
5. Do not touch the device with damp or wet hands.
6. If the device gets wet, disconnect it from the power source immediately.
7. Do not insert fingers or other objects into the dust collector fans.
8. Doing so may result in injury or damage to the device.
9. Unplug the device if:
 10. it is not used for a long time
 11. it is being cleaned
 12. the device malfunctions
13. When using the device, place your forearm on the leather cushion so that your fingers are positioned above the protective grille.
14. The bag in the absorber is reusable and washable.
15. The bag should be emptied daily after work.
16. Proper use of the device and regular emptying of the filter will ensure long and trouble-free operation.
17. Do not pierce the material with sharp objects or allow it to come into contact with heated surfaces.

MAINTENANCE AND CLEANING:

The absorber consists of chrome-plated and painted elements and is covered with eco-leather material.

1. Do not use the following cleaning agents on the absorber:

abrasive, highly
corrosive, pastes,
acetone, solvents,
alcohol-based products

2. For cleaning, use a mild detergent solution (soap, shampoo) in warm water with a soft sponge.

For heavier soiling, the device can be cleaned using products designed for cleaning delicate surfaces.

3. Dust deposited on the fans should be cleaned with a small brush from the side of the cover and from the side of the filter. After removing the dust with a brush, it is recommended to use compressed air to thoroughly remove any dust residue.

Note: The device should be cleaned and disinfected after it has been switched off and disconnected from the power supply.

OPERATION:

Before connecting the device to the power supply, please wait a moment for it to reach room temperature.

Please connect the device to a 230V 50Hz socket. The device is now ready for use.

The dust collector is activated by turning the power switch to position I or II. The collector is turned off by turning the power switch to position 0.

FILTER REPLACEMENT:

The bag (filter) should be emptied daily after finishing work. It is important to disconnect the device from the power source before each replacement or emptying of the bag (filter).

Remove the bag from the rim and replace it with a new one.

DISINFECTION:

The absorber should be disinfected with alcohol-free products designed for disinfecting delicate surfaces. Examples of disinfectant and cleaning agents available in our offer: Surfa`Safe, Lysoformin.

TECHNICAL DATA:

Model	FX-25
Power supply	220-240 V 50 Hz
Power	65 W
Noise level	40 dB
Dimensions	29 x 15 x 35 cm
Filtered air volume	max 8.5 m3
Speed	2850 rpm

SAFETY MEASURES

1. The device is professional equipment for use in beauty salons. The device should only be operated by qualified beauty salon staff to avoid undesirable effects during treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this user manual. All service and repair work must be performed exclusively by an authorized service technician (ACTIV Tomasz Pacholczyk).
3. Do not install or operate the device near liquids, wet areas, or with wet hands – so that no liquids can get into the device.
4. Immediately unplug the device and contact the authorized service provided by ACTIV Tomasz Pacholczyk in the following cases:
 - a) liquid has entered the device, b) the device emits a strange odor, smoke, or strange noises, c) the power cord has been damaged, d) the device has been knocked over or its casing has been damaged.
5. Do not place any objects on the cables. Do not install the device in places where someone could step on the power cord.
6. For safety reasons, unplug the power cord from the outlet after each use of the device.
7. Do not insert anything into the opening in the device. If a foreign object gets into the opening, unplug the cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf, or vehicle. The device may be damaged if it falls.
9. In order to guarantee the specified service life of the device, it is recommended to wait one minute before pressing the power button again (between switching on and off and vice versa).
10. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of malfunction, damage, or even burning of the device.

CAUTION:

1. In the event of damage to the power cord or other malfunctions, contact an authorized service center to avoid danger.
2. This appliance can be used by children aged 8 years and above and by persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way so that the hazards are understood.
3. The device is not intended for use by children. Children must not be allowed to play with the device. 4. Do not leave the device unattended when children or persons who are not sufficiently familiar with its use are in the vicinity.
5. This electrical appliance is not a toy. Incorrect use or contact with the electrical appliance may pose a risk to health or lead to death, so the appliance must be used and stored out of the reach of children.



DISPOSAL OF THE DEVICE

Used electrical appliances, equipment, and packaging should be taken to recycling centers in accordance with environmental protection regulations. Electrical appliances should not be disposed of in household waste containers. Follow the rules for disposing of this type of equipment. In order to protect the environment in accordance with Directive 2012/19/EU on waste electrical and electronic equipment, used electrical equipment should be collected separately and then taken to collection points for waste electrical

electronic and electrical equipment.

At the end of their useful life, old devices contain valuable recyclable components, which is why they should be sent for recycling. They should therefore be taken to appropriate collection points, or they can also be sent to ACTIV Tomasz Pacholczyk.

STORAGE AND TRANSPORT

The device should be transported at temperatures between (–) 20 °C and (+) 50 °C, exclusively in its original packaging. The device should be stored in a well-ventilated area with relative humidity not exceeding 75%. Operating temperature range: (+) 10 °C to (+) 40 °C. During storage and transport, do not throw or drop the device, expose it to mechanical shocks or atmospheric factors.