

ACTIVESHOP[®]

Instructions for use

DUST ABSORBER 383



Importer:

ACTIVESHOP Sp. z o.o.
8b Graniczna St., building
DC2A 54-610 Wrocław,
Poland
www.activeshop.com.pl
Rev. A/05/2024



Efficient dust absorber with two high-speed fans. Effectively absorbs even large amounts of dust.

Ergonomic housing with nice design.

The cushion is soft and comfortable, with eco leather upholstery.

It comes with two filter bags.

Parts of the canister:

Base	Dust bags	Power supply
		

Specifications:

Materials: metal, plastic, eco leather Input voltage: 12 V 1 A

Dimensions: 25.8 x 24 x 10

cm Net weight: 0.7 kg

Absorber operation:

1. Put the bag on the back of the fans.



2. Plug in the power cord and press the power button. The canister absorber will start working.



3. Place your hands on the absorber to start using it.



Attention:

1. Before cleaning, turn off the absorber with the button and unplug from the power supply.
2. Every part of the absorber, can be wiped with a soft cloth.
3. Regularly **replace** the dust bag when it gets full. Failure to do so, may cause damage to the absorber.

Note

- **Note that the pores in the bag become clogged, resulting in poor airflow, as a consequence, the absorber ceases to perform its function. Under such circumstances, the fans are also subject to an above-normal load, which may cause the device to fail.**
- **Use only the original power supply.**
- Replace the bag regularly with a new one.
- When connecting the plug, do not touch its metal parts.
- Clean the device periodically to prevent the accumulation of dirt, dust and other undesirable substances. Accumulation of the above, can lead to malfunction or even damage to the equipment.
- It is not allowed to wrap the power cord around the device, it may cause the cord to malfunction.
- Always make sure that the device is powered from a source with the correct voltage rating. Make sure the plug is properly inserted into the outlet.
Failure to do so may result in fire, electric shock or burns. Do not plug or unplug the device from the outlet with wet or damp hands.
- Do not use the device under the following conditions: When the cord or plug heats up or is damaged When the plug is loose in the outlet;
- The cord must not be modified, stretched, excessively bent or twisted.
- Nothing heavy may be placed on the cord.
- Prevent dust or other harmful elements from getting into the plug.
- Do not use or store the device in the bathroom or other rooms with high humidity. This may result in electric shock, fire or insulation damage.
- Do not allow children to use the device.
- Do not use the device near flammable substances such as alcohols, solvents, gasoline, spray aerosols, etc. This may lead to explosion or fire.
- Do not hit or throw the device. If the device is damaged by impact or falling, you cannot continue to use it.
- Do not attempt to disassemble or repair the equipment. For repairs, contact the distributor from whom the equipment was purchased or an authorized service center.

SAFETY MEASURES

1. The device is professional equipment for use in beauty parlors. Operation of the device only by qualified cosmetic personnel avoids undesirable consequences during treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. Any servicing and repairs must be performed only by an authorized service employee (ACTIVESHOP Ltd. company).
3. Do not install or operate the device near liquids, wet places or with wet hands - so that no liquids get into the device.
4. Immediately unplug the device from the outlet and contact the authorized service provided by ACTIVESHOP Ltd. in the following cases:
(a) liquid has entered the device, (b) the device emits a strange odor, smoke or makes strange sounds, (c) the power cord has been damaged, d) the device has been overturned or its housing has been damaged.
5. Do not lay any objects on the cables. Do not install the device where someone may step on the power cord.
6. For safety purposes, remove the power cord from the outlet each time you finish working with the device.
7. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf or vehicle. If dropped, the device may be damaged.
9. In order to guarantee the stated life of the device, it is recommended to keep an interval of one minute before pressing the power button again (between switching on and off and vice versa).
10. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of incorrect operation of the device its damage and even burning.

CAUTION:

1. In case of damage to the power cord or other malfunctions, contact an authorized service center - this will avoid danger.
2. This equipment may be used by children at least 8 years of age and by persons of diminished physical and mental capabilities and persons without experience and familiarity with the equipment, if supervision or instruction on the use of the equipment in a safe manner is provided so that the associated risks are understood.
3. The equipment is not intended for play by children. Do not allow children to play with the equipment.
4. Do not leave the appliance unattended when children or persons without sufficient knowledge of the use of the appliance are in the vicinity.
5. This electrical appliance is not a toy. Improper use or contact with the electrical appliance may pose a health risk or lead to death, so use and store the appliance out of the reach of children.

DISPOSAL OF THE DEVICE



Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Electrical appliances should not be disposed of in household waste containers. Follow the rules for discarding this type of equipment. In order to protect the environment in accordance with Directive 2012/19/EC concerning waste used electrical and electronic equipment used electrical

electrical equipment should be collected separately, and then handed over to collection points for waste electronic and electrical equipment.

At the end of their useful life, old appliances also contain full-value recyclable components, so hand them over for reprocessing. They should be handed over to appropriate collection points, as well as they can be handed over to ACTIVESHOP Ltd.

STORAGE AND TRANSPORT

The device should be transported at a temperature range of (-) 20 °C to (+) 50 °C only in its original packaging. Store the device in a well-ventilated room with a relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.